


Alarm Email Setting

Email function are becoming very popular and useful in our life now,just like your assistant.For example,if you have installed cameras and dvr in your house ready,while some one is rushing into your house,then the dvr will send email to you enclosed at same time when motion detect/video loss/video blind/alarm in,operstion steps are as below:

1.Email Setting.

1) Go to Main Menu->System->NetService to double click "EMAIL",see below picture:

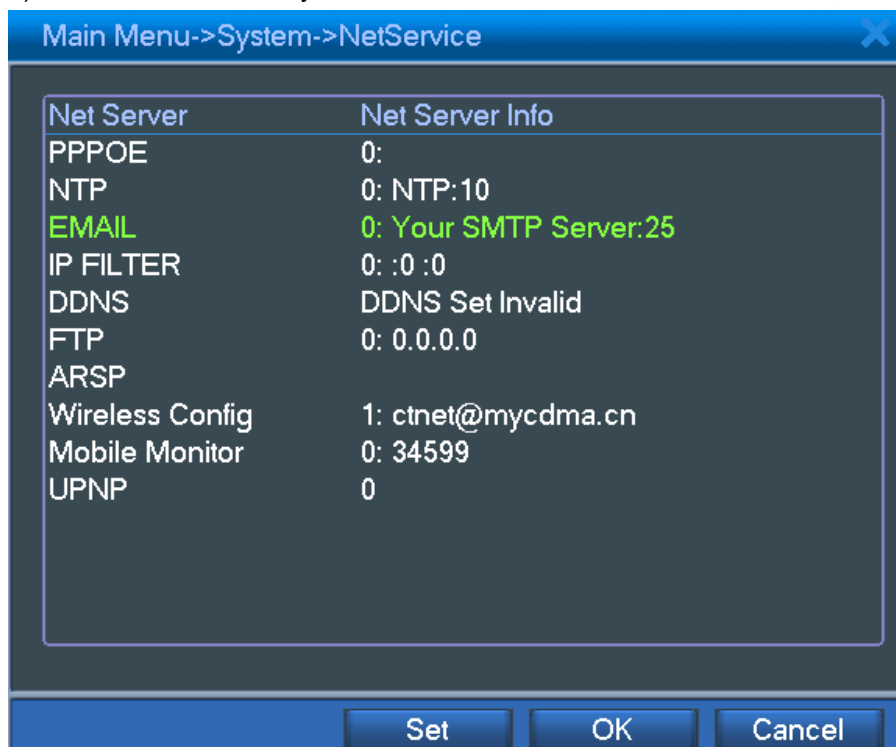

2) To write the EMAIL settings,for example gmail,see below picture:

Main Menu->System->NetService->EMAIL

Enable

SMTP Server

Port

Need SSL

User Name

Password

Sender

Receiver

Title

OK Cancel

Pls note: Email sender and receiver are the same one.

2.FTP setting.

Main Menu->System->NetService->FTP

Enable

Server IP

Port

User Name

Password Anonymous


Max File Length M

DirName


OK Cancel

3.Hard drive partition.

1)Go to Main Menu->Advanced->HDD Manage,click "partition" and write partition value then click "OK",see below pictures:

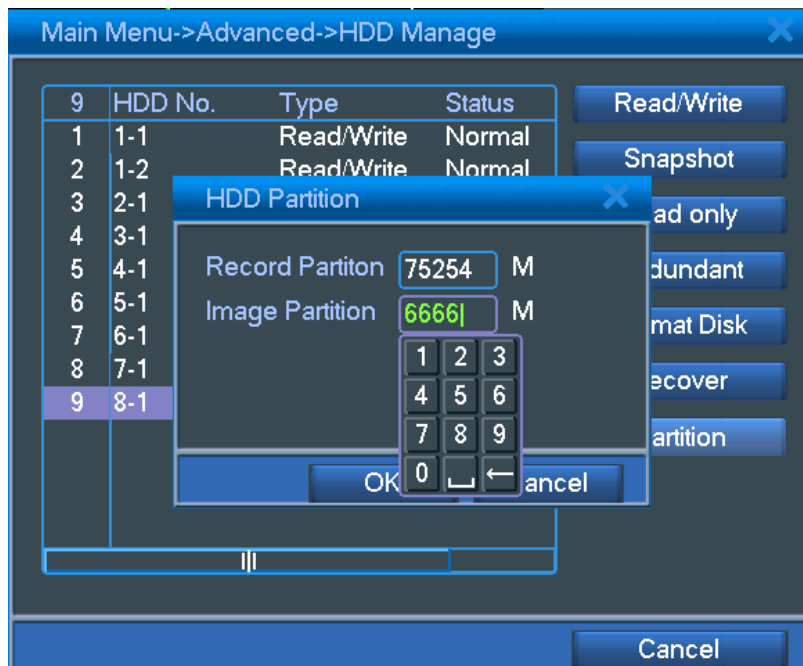


2)After partition,click "OK" to reboot,see below picture:

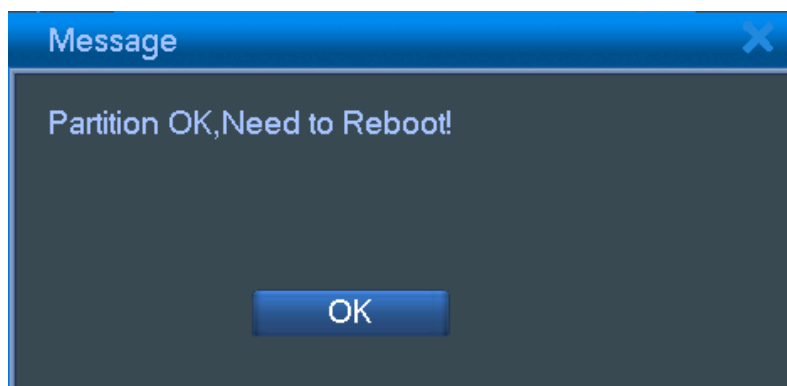

4. Storage.

Go to Main Menu->Record, select "Record->Schedule","Week->All" and "Period 1->00:00-24:00",then click "OK" see below picture:

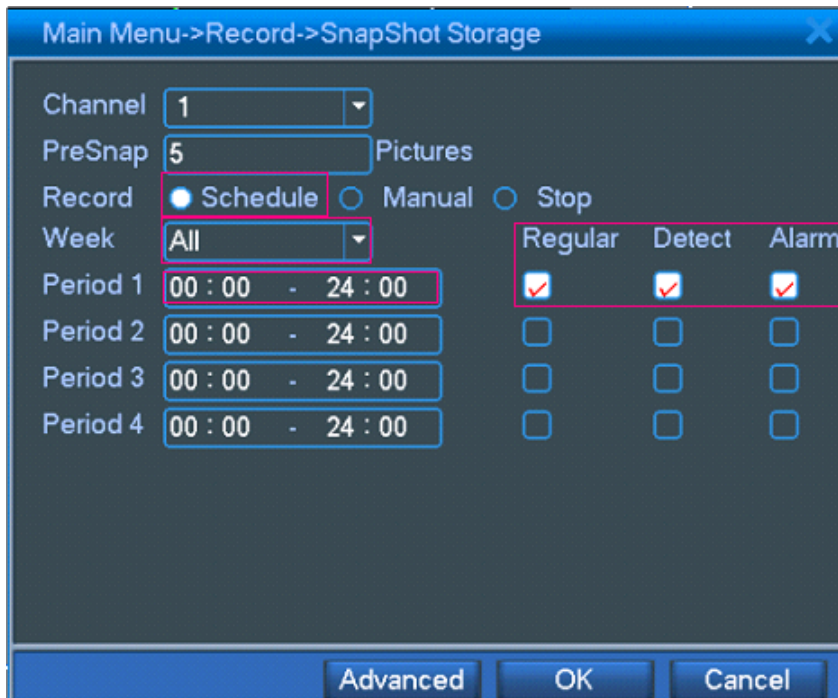

5.Motion Detect.

Go to Main Menu->Alarm->Motion Detect,select "Enable", "Send Email",then click "OK",see below picture:

